



## NUMBER CARD ASSEMBLY INSTRUCTIONS

### A. REMOVAL OF FINGER PLATE

REVOLVE THE FINGER PLATE (A) IN A CLOCKWISE DIRECTION AS FAR AS IT WILL GO. THEN INSERT ONE END OF AN OPENED PAPER CLIP (B) INTO THE TAB RELEASE HOLE (C) AND DEPRESS THE TAB APPROXIMATELY 1/8". WITH THE LOCKING TAB DEPRESSED, CONTINUE TO TURN THE FINGER PLATE IN A CLOCKWISE DIRECTION UNTIL A SECOND STOP IS REACHED. REMOVE THE PAPER CLIP (B) AND LIFT THE FINGER PLATE FROM THE DIAL.

### B. REMOVAL OF NUMBER CARD

TO REMOVE THE NUMBER CARD, THE FINGER PLATE MUST FIRST BE REMOVED AS OUTLINED UNDER "A". THEN TURN THE FINGER PLATE ASSEMBLY OVER, AND REMOVE CARD.

### C. ASSEMBLY OF NUMBER CARD

PLACE THE NUMBER CARD (D) IN THE FINGER PLATE (A). NOTE THAT THE NOTCH OF CARD FITS INTO A LOCATING EAR (H) OF THE FINGER PLATE.

### D. ASSEMBLY OF FINGER PLATE

PLACE THE FINGER PLATE (A) SQUARELY OVER THE SPIDER SPRING ASSEMBLY (J) ON THE DIAL WITH THE NO.10 HOLE OF THE FINGER PLATE (A) DIRECTLY OVER THE CENTER OF THE NO.9 DOT ON THE NUMERAL RING. TURN THE FINGER PLATE (A) FIRMLY IN A COUNTER-CLOCKWISE DIRECTION UNTIL THE FINGER PLATE (A) LOCKS IN PLACE.

NOTE: WHEN REPLACING FLAT FINGER PLATE WITH CURVED TOP FINGER PLATE, BEND FINGER STOP APPROXIMATELY 10° AS SHOWN, OR REPLACE WITH BENT UP FINGER STOP.